Quick User Manual





Thank you for your purchase of the Gingko Drum Light Speaker.

Please read the instruction manual carefully to achieve the
best performance of this product.

Please keep this instruction manual safe for future reference



It includes a Drum Light Speaker, a USB C charging cable and a instruction manual booklet.





Product Operation Guide

ON/ OFF:

Play / Pause:

Press the (b) button once to pause or resume.

 
Please note the speaker will turn off if left idle for 5 minutes.

5V Type C USB Charging:

The speaker takes approximately 1.5 - 2 hours to be fully charged.

Red Light Flashing: Device charging Solid Red Light: Device fully charged

(You may connect the USB charging lead to any 5V USB charger to charge the product, such as smart phone charger or a computer USB port)






Bluetooth Pairing:

Turn on Bluetooth on your device and find 'Gingko Drum Speaker' and touch to connect (10m range max)

 When the indication light is flashing in white, it means searching for a bluetooth device and when it's in solid white light, it means device paired succesfully.









TWS (True Wireless Stereo) Pairing

This product has TWS technology built in so you can enjoy stereo quality sound when you have 2 Mini Drum Light Speakers

- Turn on both speakers by pressing and holding down the power button for 3 seconds and make sure both speakers are not paired with any other bluetooth device first.
- 2. Quickly double click the power button on one or both speakers and they should pair in 15 seconds with a beep sound.
- 3. If the pairing is unsuccessful, turn both devices off and try it again by following the step 1 and 2 again. When paired, the main speaker indication light will flash and the other device light will stay on.
- 4. To unpair the devices, double click the power button.



The two devices will be automatically paired once they have been turned on if they have been paired before.

Press the power button once on either speaker will pause or resume



To activate lamp mode, turn the lamp side to the top. Double click the power button to change between the 2 brightness. The light will switch off when turned upside down.



Side Way Speaker Mode

You can also turn the speaker side way for the speaker to project a more amplified sounds. See the left picture.



Lamp and Speaker Mode

Turn the speaker side way when turned on and roll onto one side to switch the light on. Roll the other way to switch the light off.

See right picture.





Warranty

This product is covered under one year manufacturer warranty starting from the date of purchase. Within the warranty period, any repair service or components replacement will be provided for free. Warranty does not apply to the following circumstances:

- 1. Product failure due to improper use, misuse, drops, abuse, alteration, faulty installation, power line surge or modification
- Product failure due to acts of nature such as natural disaster, fire, flood, or casualty.
- 3. Any damage caused to the charging port by user error is not covered by the manufacturer warranty.

Product Care

- The product is made of natural wood, any natural wood grain on the wood is not a product fault.
- 2. Heavy drop or misuse of this product could cause damage to the device and the wooden exterior.
- 3. You may use a wet cloth to clean the wooden exterior, however do not have direct contact with water as this product is not water proof.
- 4. Only use 5V USB charging adaptors(Not included) to charge this product.

If you have any further queries about this product, please feel free to get in touch with us at customerservices@gingkodesign.co.uk



Unit C23c Holly Farm Business Park, Kenilworth CV8 1NP, United Kingdom

Copyright © Gingko Design Ltd

www.gingkodesign.co.uk

Proudly designed in Warwick, UK by Gingko Design Ltd All rights registered Responsibly Made in China

